



25hp, 35hp, 37hp and 40hp BIG BLOCK ENGINES

#### Oil Change Maintenance

First Service (break in) is a 15 hrs. Change Oil and filter

Change Engine oil and filter every 50 Hrs

- 15/50 Full Synthetic oil
- 2 ½ Quarts
- BRIGGS Filter part #842921

#### Transmission Maintenance

Change every 100 hours, use the same engine oil that you use in your engine.

- 15/50 Full Synthetic oil
- 1.5 Oz (do not over fill)

\*The first time you change it, it maybe thick and dark in color.

#### Mid-Section Maintenance

(Serial #s Before 14462) Pump 2-3 pumps of grease. Every 25-50 hrs.

(Serial #s After 14462) Grease midsection every 6 months. Remove drain plug from the bottom of midsection before greasing the zerk on the top and look for grease to come out of the plug hole. When you see grease, it is full, and the plug can be reinstalled.

#### Lower Unit

Grease and check lower unit grease every 50 hrs or every 8 to 10 hunting or fishing trips. \*MAKE SURE TO REMOVE ALLEN HEAD DRAIN OR PHILLIPS HEAD PLUG BEFORE YOU PUMP GREASE\*.

Shchaeffer's Grease 219 Ultra Supreme Waterproof (GREEN)

- NIGI 2 or 3 (thickness)
- NEVER USE RED GREASE

#### Fuel maintenance

Run the Highest-octane fuel available or non-Ethanol

- 93 Octane
- Run a stabilizer treatment when storing (Ex Stabil Marine)
- BRIGGS fuel filter Part # 845125

#### Warranty

3 Year warranty on Briggs and Stratton Motors

1 Year warranty on Gator Tail Parts

Warranty starts from the original date of purchase

\*Gatortail Dealers or Gatortail Warranty Centers must complete all warranty work.\*