



40 HP Brigg and Stratton GTZ

Oil Change Maintenance

First Service (break in) is a 15 hrs. Change Oil and filter

Change Engine oil and filter every 50 Hrs

- 15/50 Full Synthetic oil
- 2 ½ Quarts (will be over the full mark, should be at the hump on the dipstick)
- BRIGGS Filter part #842921

Transmission Maintenance

Change every 100 hours

- 15/40 Lucas Oil (Magnum Long Drain HD)
- 19 oz (do not over fill)

Oil drain and dip stick (Fill) 15ft Pounds of Torque

Mid-Section Maintenance

* Grease midsection every 6 months. Grease Zerk is on the bottom of vertical shaft, Grease until new grease appears from the top of the midsection. Schaeffer's Grease 219 Ultra Supreme Waterproof (GREEN)

- NLGI 2 or 3 (thickness)
- NEVER USE RED GREASE

Oil Filled Lower Unit

*Service every 100 HRS (85W-140 Gear Oil)

- Drain Oil

Trim motor all the way down. Remove screw closest to belt housing first. Then remove the one near the prop to let oil drain.

- Fill Oil

Trim motor all the way up and put it on the tilt pin. (Right side of the transom clamp) Fill from the front screw until it comes out of the prop side screw. Once oil comes out of prop side replace screw, the replace screw on the belt housing side.

Fuel maintenance

- 93 Octane
- Run a stabilizer treatment when storing (Ex Stabil Marine)
- BRIGGS fuel filter Part # 845125

Warranty

3 Year warranty on Briggs and Stratton Motors

1 Year warranty on Gator Tail Parts

Warranty starts from the original date of purchase

Gatortail Dealers or Gatortail Warranty Centers must complete all warranty work.